



Fujitsu Air Conditioning Controller

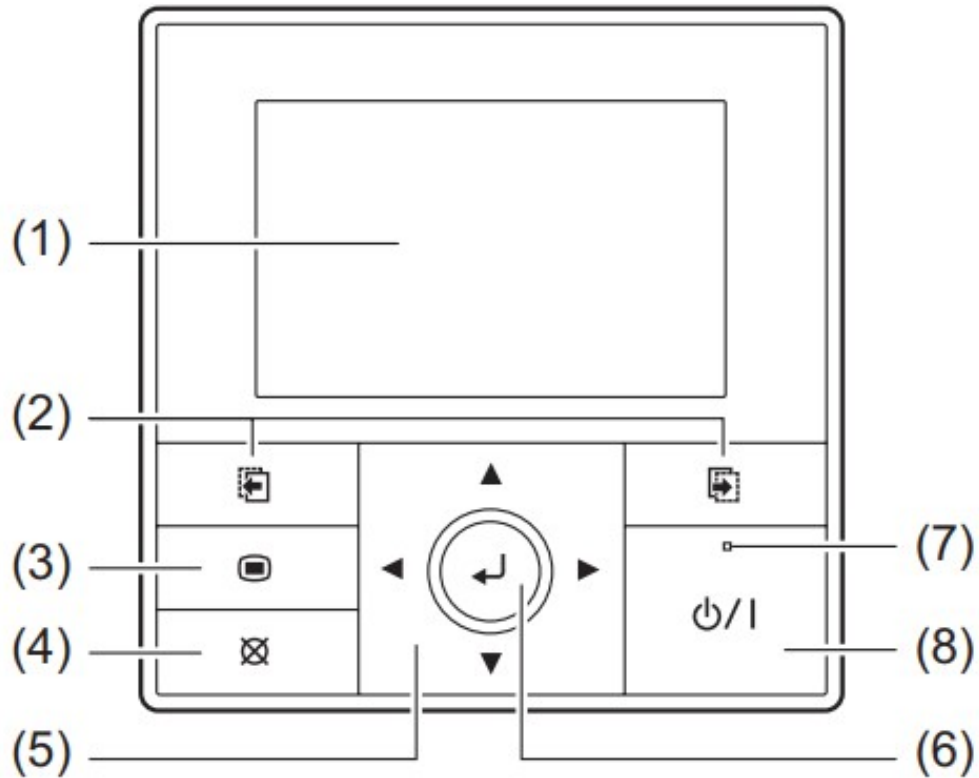

Fujitsu Air Conditioning Control Panel

- (1) Display screen
- (2) Back and Forward buttons
- (3) Menu button
- (4) Cancel button
- (5) Cursor navigation buttons
- (6) Enter button
- (7) Power Indicator led
- (8) On/Off button

“Monitor” screen shows several statuses such as the operating status of the air conditioner, function setting, or other current operating conditions.

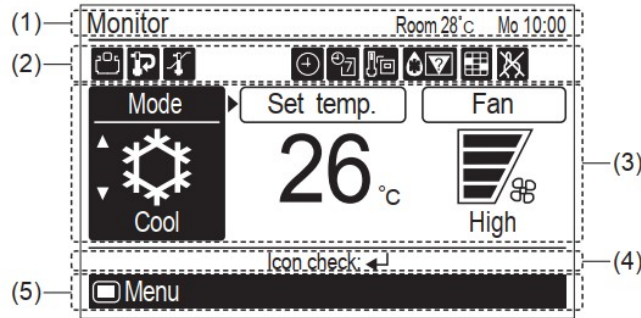

(1) **Screen status and current conditions**

Shows the current screen name, room temperature, day of the week, and clock.

NOTES:

- The clock can be changed to 24-hour clock, AM/PM (12-hour: 12:00–11:59 or 0:00–11:59) clock. (Refer to “5-2-4. Change display format setting”.)
- Room temperature indication is available only if the “Room temp. display” function is enabled. (Refer to “5-6. Room temp. display setting”.)

(2) **Icon display**

Shows the function that is currently working or set.

NOTE: In this section, all the possible icons are displayed for description.

Icon	Function name	See page
	- Economy	12
	Set temp. (temperature) auto return	12
	Set temp. (temperature) range limitation	13
	On timer	14
	Off timer	15
	Auto-off timer	22
	Weekly timer	16
	R.C. (Remote Controller) sensor control	28
	Automatic defrosting, oil recovery, or mode mismatch	35
	Filter cleaning notification	26
	R.C. (Remote Controller) prohibition	-

White icon on a black background:


Indicates that the function is valid and performing the function or standby state.

Black icon on a white background:

Indicates that the controller is in non-operating state because R.C. prohibition on the primary unit is working, or timer has been set, though the function is valid.

2-1-2. Operation mode setting

In "Monitor" screen, select [Mode], and switch to the desired operation mode with the [Cursor button (Up/Down)].

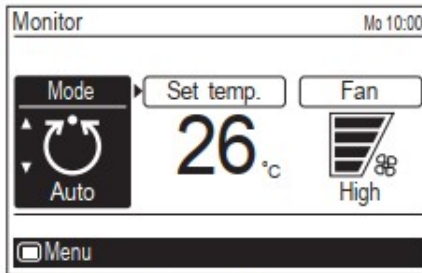

Operation mode marks




Note

Only the adjustable operation mode is displayed.

If there is another operation setting to be changed, you can continue the configuration. Move to desired item by using [Cursor button (Left/Right)].

2-1-3. Set temperature adjustment


In "Monitor" screen, select [Set temp.] with the [Cursor button (Left/Right)], and adjust the room temperature with the [Cursor button (Up/Down)].

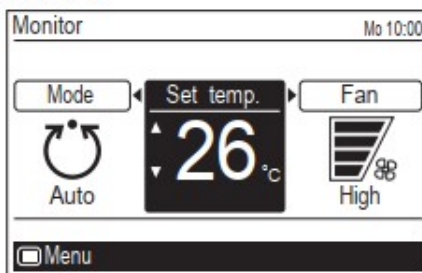

Notes


- Possible temperature setting ranges in the operation mode are as follows:

Cool, Dry, Auto	18 to 30 °C (64 to 88 °F)
Heat.....	16 to 30 °C (60 to 88 °F)
- When operation mode is set to [Fan], the set temperature cannot be adjusted. ([Set temp.] cannot be selected.)
- If the temperature is being out of the range configured in [Set temp. range] setting, message indicating that the temperature is restricted is displayed on the screen.

 

2-1-4. Fan speed setting

In "Monitor" screen, select [Fan] with the [Cursor button (Left/Right)], and adjust the fan speed with the [Cursor button (Up/Down)].

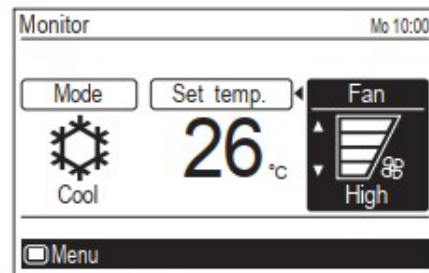

Fan speed marks



Note

When the operation mode is set to [Dry], Fan speed switches to [Auto]. (Fan speed cannot be selected.)

About fan speed [Auto]

When the fan speed is set to [Auto], behavior of the indoor unit fan in non-zone-controlled system and the one in zone-controlled system is different as follows.

In non-zone-controlled system:

If the room temperature approaches to the configured temperature in [Set temp.], the fan rotates with reduced speed.

In zone-controlled system:


The fan speed is adjusted depending on the number of air-conditioned zone(s).

If the volume of provided airflow by [Auto] is not agreeable to your preference, adjust it to just the right fan speed by changing the fan speed.


4. TIMER SETTING

4-1. Switching to the "Timer" screen

- 1 In "Menu" screen, select [Timer] with the [Cursor button (Up/Down)], and press the [Enter button].

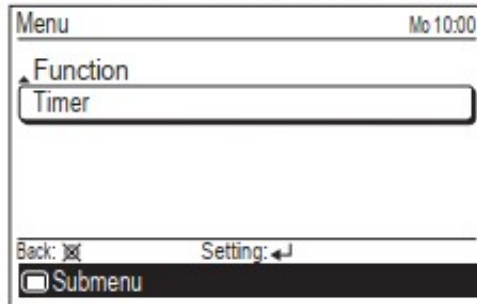


- 2 "Timer" screen is displayed. To return to the "Menu" screen, press the [Cancel button].

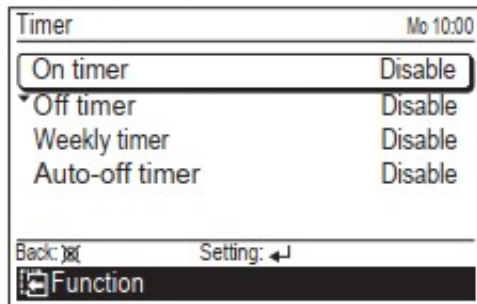


4-2. Timer setting items

4-2-1. On timer setting

- 1 In "Timer" screen, select [On timer] with the [Cursor button (Up/Down)], and press the [Enter button].

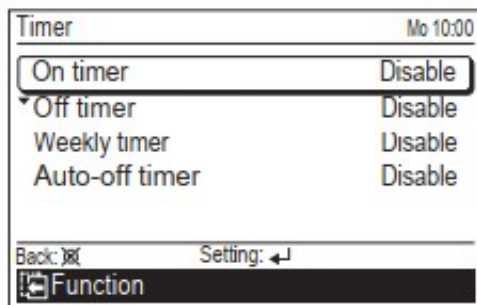


- 2 "On timer" screen is displayed.

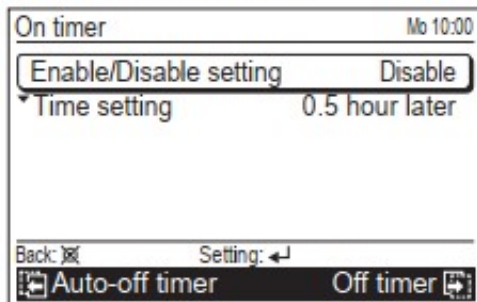


To change the setting, select the item with the [Cursor button (Up/Down)], and press the [Enter button].

- 3** For [Enable/Disable setting], select [Enable] or [Disable] with the [Cursor button (Up/Down)], and press the [Enter button] to complete the setting.

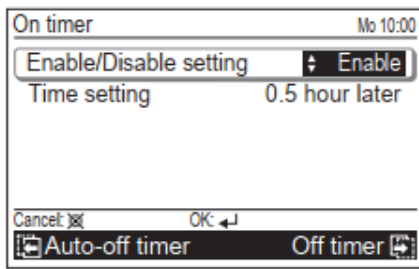

- 4** For [Time setting], adjust the time with the [Cursor button (Up/Down)], and press the [Enter button] to complete the setting.

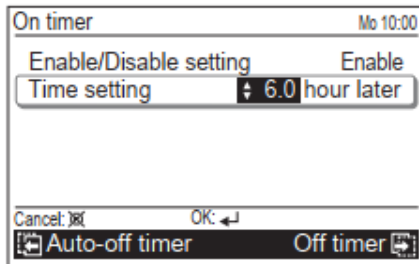


Note

The [Time setting] can be set up to 24 hours in units of 30 minutes.


When you return to the "Monitor" screen, the icon is displayed. When the timer is enabled, the remaining time until the timer expires is displayed in the message balloon.

To check the function, press the [Enter button] and select the icon with the [Cursor button (Left/Right)].

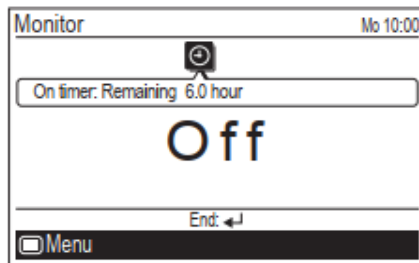


4-2-2. Off timer setting

- 1** In "Timer" screen, select [Off timer] with the [Cursor button (Up/Down)], and press the [Enter button].

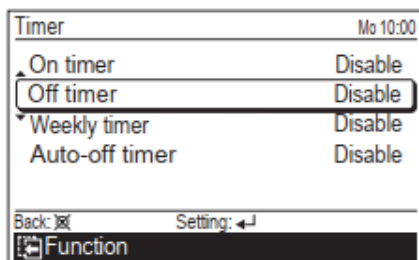


- 2** "Off timer" screen is displayed.

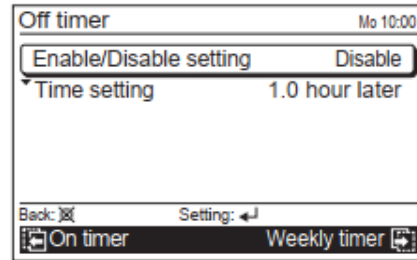


To change the setting, select the item with the [Cursor button (Up/Down)], and press the [Enter button].

- 3** For [Enable/Disable setting], select [Enable] or [Disable] with the [Cursor button (Up/Down)], and press the [Enter button] to complete the setting.

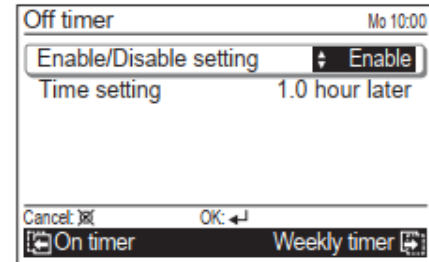

- 4** For [Time setting], adjust the time with the [Cursor button (Up/Down)], and press the [Enter button] to complete the setting.

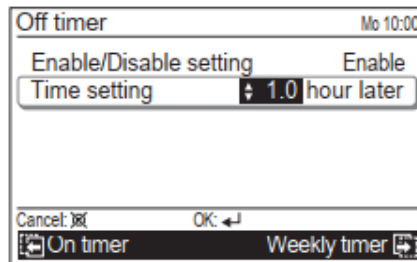

Note

The [Time setting] can be set up to 24 hours in units of 30 minutes.

When you return to the "Monitor" screen, the icon is displayed. When the timer is enabled, the remaining time until the timer expires is displayed in the message balloon.

To check the function, press the [Enter button] and select the icon with the [Cursor button (Left/Right)].

